



LISTA CANALI

XC-5104 BEAM 230

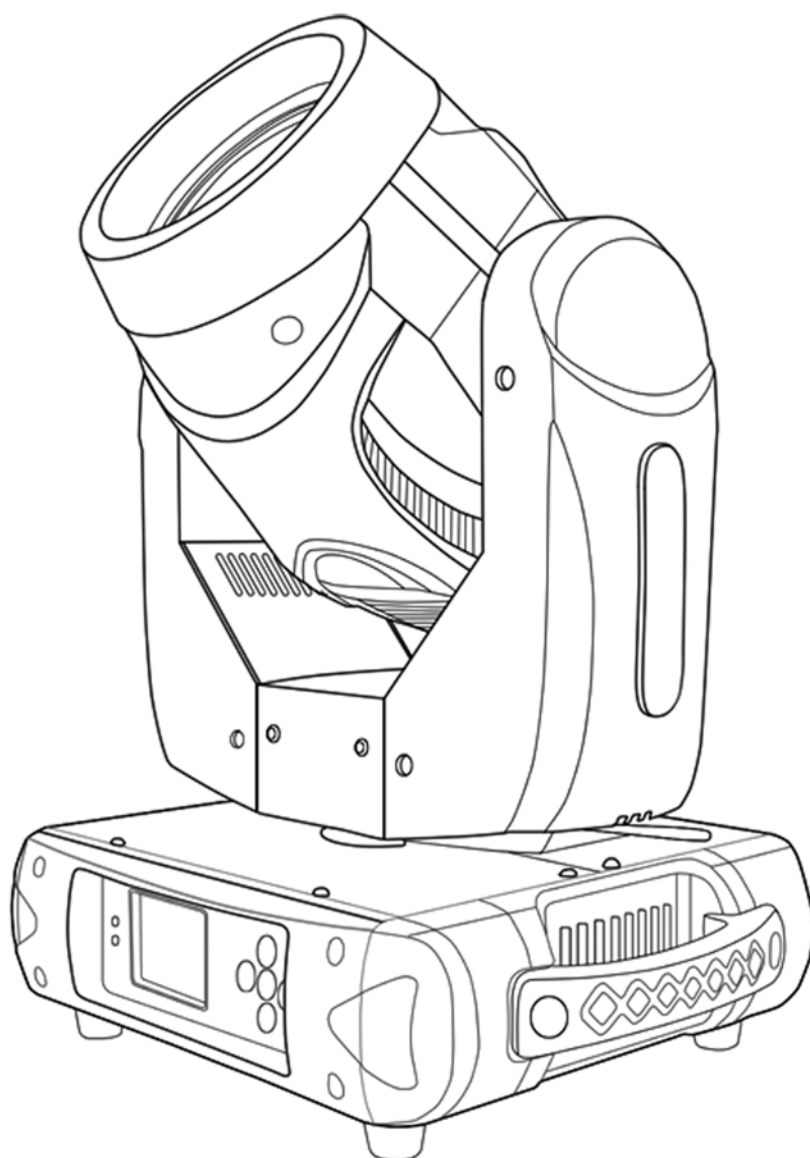

XC-5104 BEAM 230

CHANNEL LIST DOUBLE PRISM CHANNEL MODE

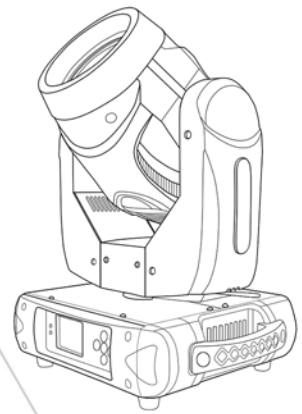


16 Channel	FUNCTION	VALUE	DESCRIPTION
CH 1	Color wheel	0-4	White
		5-9	White + Red
		10-14	Red
		15-19	Red + Orange
		20-24	Orange
		25-29	Orange + Aquamarine
		30-34	Aquamarine
		35-39	Aquamarine + Green
		40-44	Green
		45-49	Green + Light green
		50-54	Light green
		55-59	Light green + Yellow
		60-64	Yellow
		65-69	Yellow + Pink
		70-74	Pink
		75-79	Pink + Blue
		80-84	Blue
		85-89	Blue + Warm white
		90-94	Warm white
		95-99	Warm white + Cyan
		100-104	Cyan
		105-109	Cyan + CTO 260
		110-114	CTO 260
		115-119	CTO 260 + CTO 190
		120-124	CTO 190
		125-129	CTO 190 + CTB 8000
		130-134	CTB 8000
		135-139	CTB 8000 + Blue
		140-144	Blue
		145-149	Blue + White
		150-199	Slow rotation (0.2rpm)
		200-255	
CH 2	Flash	0-5	Full off
		6-11	Full on
		12-107	Strobe from slow to fast
		108-149	Pulse effect opening, increasing
		150-191	Pulse effect closing, increasing
		192-251	Random strobe with decreasing speed
		252-255	Full on
CH 3	Dimmer	0-255	Dark - bright
CH 4	Gobo	0-2	White
		3-5	Gobo 1
		6-8	Gobo 2
		9-11	Gobo 3
		12-14	Gobo 4
		15-17	Gobo 5
		18-20	Gobo 6
		21-23	Gobo 7
		24-26	Gobo 8
		27-29	Gobo 9
		30-32	Gobo 10
		33-35	Gobo 11
		36-38	Gobo 12
		39-41	Gobo 13

CH 4	Gobo	42-44	Gobo14
		45-47	Gobo 15
		48-50	Gobo 16
		51-53	Gobo 17
		54-69	Gobo rotation, forward
		70-85	Gobo rotation, backward
		86-95	Gobo 2 shake (slow to quick)
		96-105	Gobo 3 shake (slow to quick)
		106-115	Gobo 4 shake (slow to quick)
		116-125	Gobo 5 shake (slow to quick)
		126-135	Gobo 6 shake (slow to quick)
		136-145	Gobo 7 shake (slow to quick)
		146-155	Gobo 8 shake (slow to quick)
		156-165	Gobo 9 shake (slow to quick)
		166-175	Gobo 10 shake (slow to quick)
		176-185	Gobo 11 shake (slow to quick)
		186-195	Gobo 12 shake (slow to quick)
		196-205	Gobo 13 shake (slow to quick)
		206-215	Gobo 14 shake (slow to quick)
		216-225	Gobo 15 shake (slow to quick)
		226-235	Gobo 16 shake (slow to quick)
		236-245	Gobo 17 shake (slow to quick)
CH 5	Prism 1	0-127	No prism
		128-255	Prism
CH 6	Prism rotation	0-10	Stop
		11-120	Prism rotation, forward
CH 7	Prism 2	0-127	No prism
		128-255	Prism
CH 8	Frost Colorful	0-255	Linear variation
CH 9	Focus	0-255	Linear adjustment
CH 10	PAN	0-255	0-540°
CH 11	PAN fine	0-255	1.2° fine
CH 12	TILT	0-255	0-270°
CH 13	TILT fine	0-255	1.2° fine
CH 14	Function	0-11	Unused range
		12-24	PAN/TILT Function (Fast)
		25-37	Normal
		38-50	Conventional
		51-62	Linear
		63-255	Unused range
CH 15	Reset	0-239	No function
		240-255	Reset
CH 16	Lamp	100-105	Lamp off
		200-205	Lamp on

XC-5104 BEAM 230

CHANNEL LIST SINGLE PRISM CHANNEL MODE

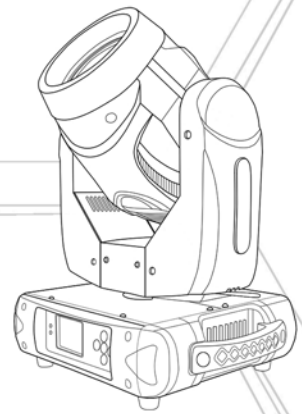

16 Channel	FUNCTION	VALUE	DESCRIPTION
CH 1	Color wheel	0-4	White
		5-9	White + Red
		10-14	Red
		15-19	Red + Orange
		20-24	Orange
		25-29	Orange + Aquamarine
		30-34	Aquamarine
		35-39	Aquamarine + Green
		40-44	Green
		45-49	Green + Light green
		50-54	Light green
		55-59	Light green + Yellow
		60-64	Yellow
		65-69	Yellow + Pink
		70-74	Pink
		75-79	Pink + Blue
		80-84	Blue
		85-89	Blue + Warm white
		90-94	Warm white
		95-99	Warm white + Cyan
		100-104	Cyan
		105-109	Cyan + CTO 260
		110-114	CTO 260
		115-119	CTO 260 + CTO 190
		120-124	CTO 190
		125-129	CTO 190 + CTB 8000
		130-134	CTB 8000
		135-139	CTB 8000 + Blue
		140-144	Blue
		145-149	Blue + White
		150-199	Slow rotation (0.2rpm)
		200-255	
CH 2	Flash	0-5	Full off
		6-11	Full on
		12-107	Strobe from slow to fast
		108-149	Pulse effect opening, increasing
		150-191	Pulse effect closing, increasing
		192-251	Random strobe with decreasing speed
		252-255	Full on
CH 3	Dimmer	0-255	Dark - bright
CH 4	Gobo	0-2	White
		3-5	Gobo 1
		6-8	Gobo 2
		9-11	Gobo 3
		12-14	Gobo 4
		15-17	Gobo 5
		18-20	Gobo 6
		21-23	Gobo 7
		24-26	Gobo 8
		27-29	Gobo 9
		30-32	Gobo 10
		33-35	Gobo 11
		36-38	Gobo 12
		39-41	Gobo 13

CH 4	Gobo	42-44	Gobo14
		45-47	Gobo 15
		48-50	Gobo 16
		51-53	Gobo 17
		54-69	Gobo rotation, forward
		70-85	Gobo rotation, backward
		86-95	Gobo 2 shake (slow to quick)
		96-105	Gobo 3 shake (slow to quick)
		106-115	Gobo 4 shake (slow to quick)
		116-125	Gobo 5 shake (slow to quick)
		126-135	Gobo 6 shake (slow to quick)
		136-145	Gobo 7 shake (slow to quick)
		146-155	Gobo 8 shake (slow to quick)
		156-165	Gobo 9 shake (slow to quick)
		166-175	Gobo 10 shake (slow to quick)
		176-185	Gobo 11 shake (slow to quick)
		186-195	Gobo 12 shake (slow to quick)
		196-205	Gobo 13 shake (slow to quick)
		206-215	Gobo 14 shake (slow to quick)
		216-225	Gobo 15 shake (slow to quick)
		226-235	Gobo 16 shake (slow to quick)
		236-245	Gobo 17 shake (slow to quick)
CH 5	Prism 1	0-127	No prism
		128-255	Prism
CH 6	Prism rotation	0-10	Stop
		11-120	Prism rotation, forward
		121-255	Prism rotation, backward
CH 7	Effect (blank)	0-255	
CH 8	Frost Colorful	0-255	Linear variation
CH 9	Focus	0-255	Linear adjustment
CH 10	PAN	0-255	0-540°
CH 11	PAN fine	0-255	1.2° fine
CH 12	TILT	0-255	0-270°
CH 13	TILT fine	0-255	1.2° fine
CH 14	Function	0-11	Unused range
		12-24	PAN/TILT Function (Fast)
		25-37	Normal
		38-50	Conventional
		51-62	Linear
		63-255	Unused range
CH 15	Reset	0-239	No function
		240-255	Reset
CH 16	Lamp	100-105	Lamp off
		200-205	Lamp on